P.O. Box 5638, Manchester, NH 03108, Phone: (603) 622-0452.

#### VIK-I COIILEIILS.


2 – DIN Rail Clips

# 4 - Self Tapping Screws

# **MK-1 Installation Instructions**

### MK-1 to A3000

- 1. Press DIN Clip against back of A3000 as in illustration on right.
- 2. Align top and bottom holes on the DIN clip with the holes on the A3000 metal mounting tab.
- 3. Insert screw into holes on A3000 mounting tab and screw into the plastic DIN clip until tight.
- 4. Repeat step #3 for second screw.
- 5. Repeat steps #1 thru #4 to mount the second DIN clip on the second mounting tab.

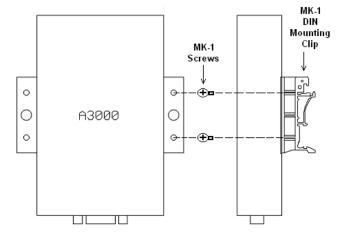


A3000 Front and Right Side View

### MK-1 to D-Series Module

- 1. Press DIN Clip against back of D-Series module as in illustration on the right.
- Align center hole on the DIN clip with the captive screw supplied with the D-Series module.
- 3. Screw the captive screw into the middle hole on plastic DIN clip until tight.
- 4. Repeat steps #1 thru #3 to mount the second DIN clip on the D-Series module.

**Note:** The four self-tapping screws are not required when mounting DIN clips on a D-Series module.

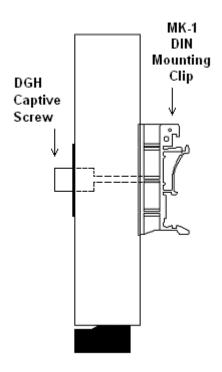

D-Series Module Right Side View

# MK-1 to D6000 Series Module

- Press DIN Clip against back of D6000 Series mounting flange.
  Align center hole on the DIN clip with the hole in the D6000 mounting flange.
- 3. Screw a self-tapping screw into the middle hole on plastic DIN clip until tight.
- 4. Repeat steps #1 thru #3 to mount the second DIN clip on the D6000 Series module.

